


ASSEMBLY AND PARTS ALBUM

KDE5000X/E、KDE6500X/E、KDE6000X3/E3、KDE6500X3/E3

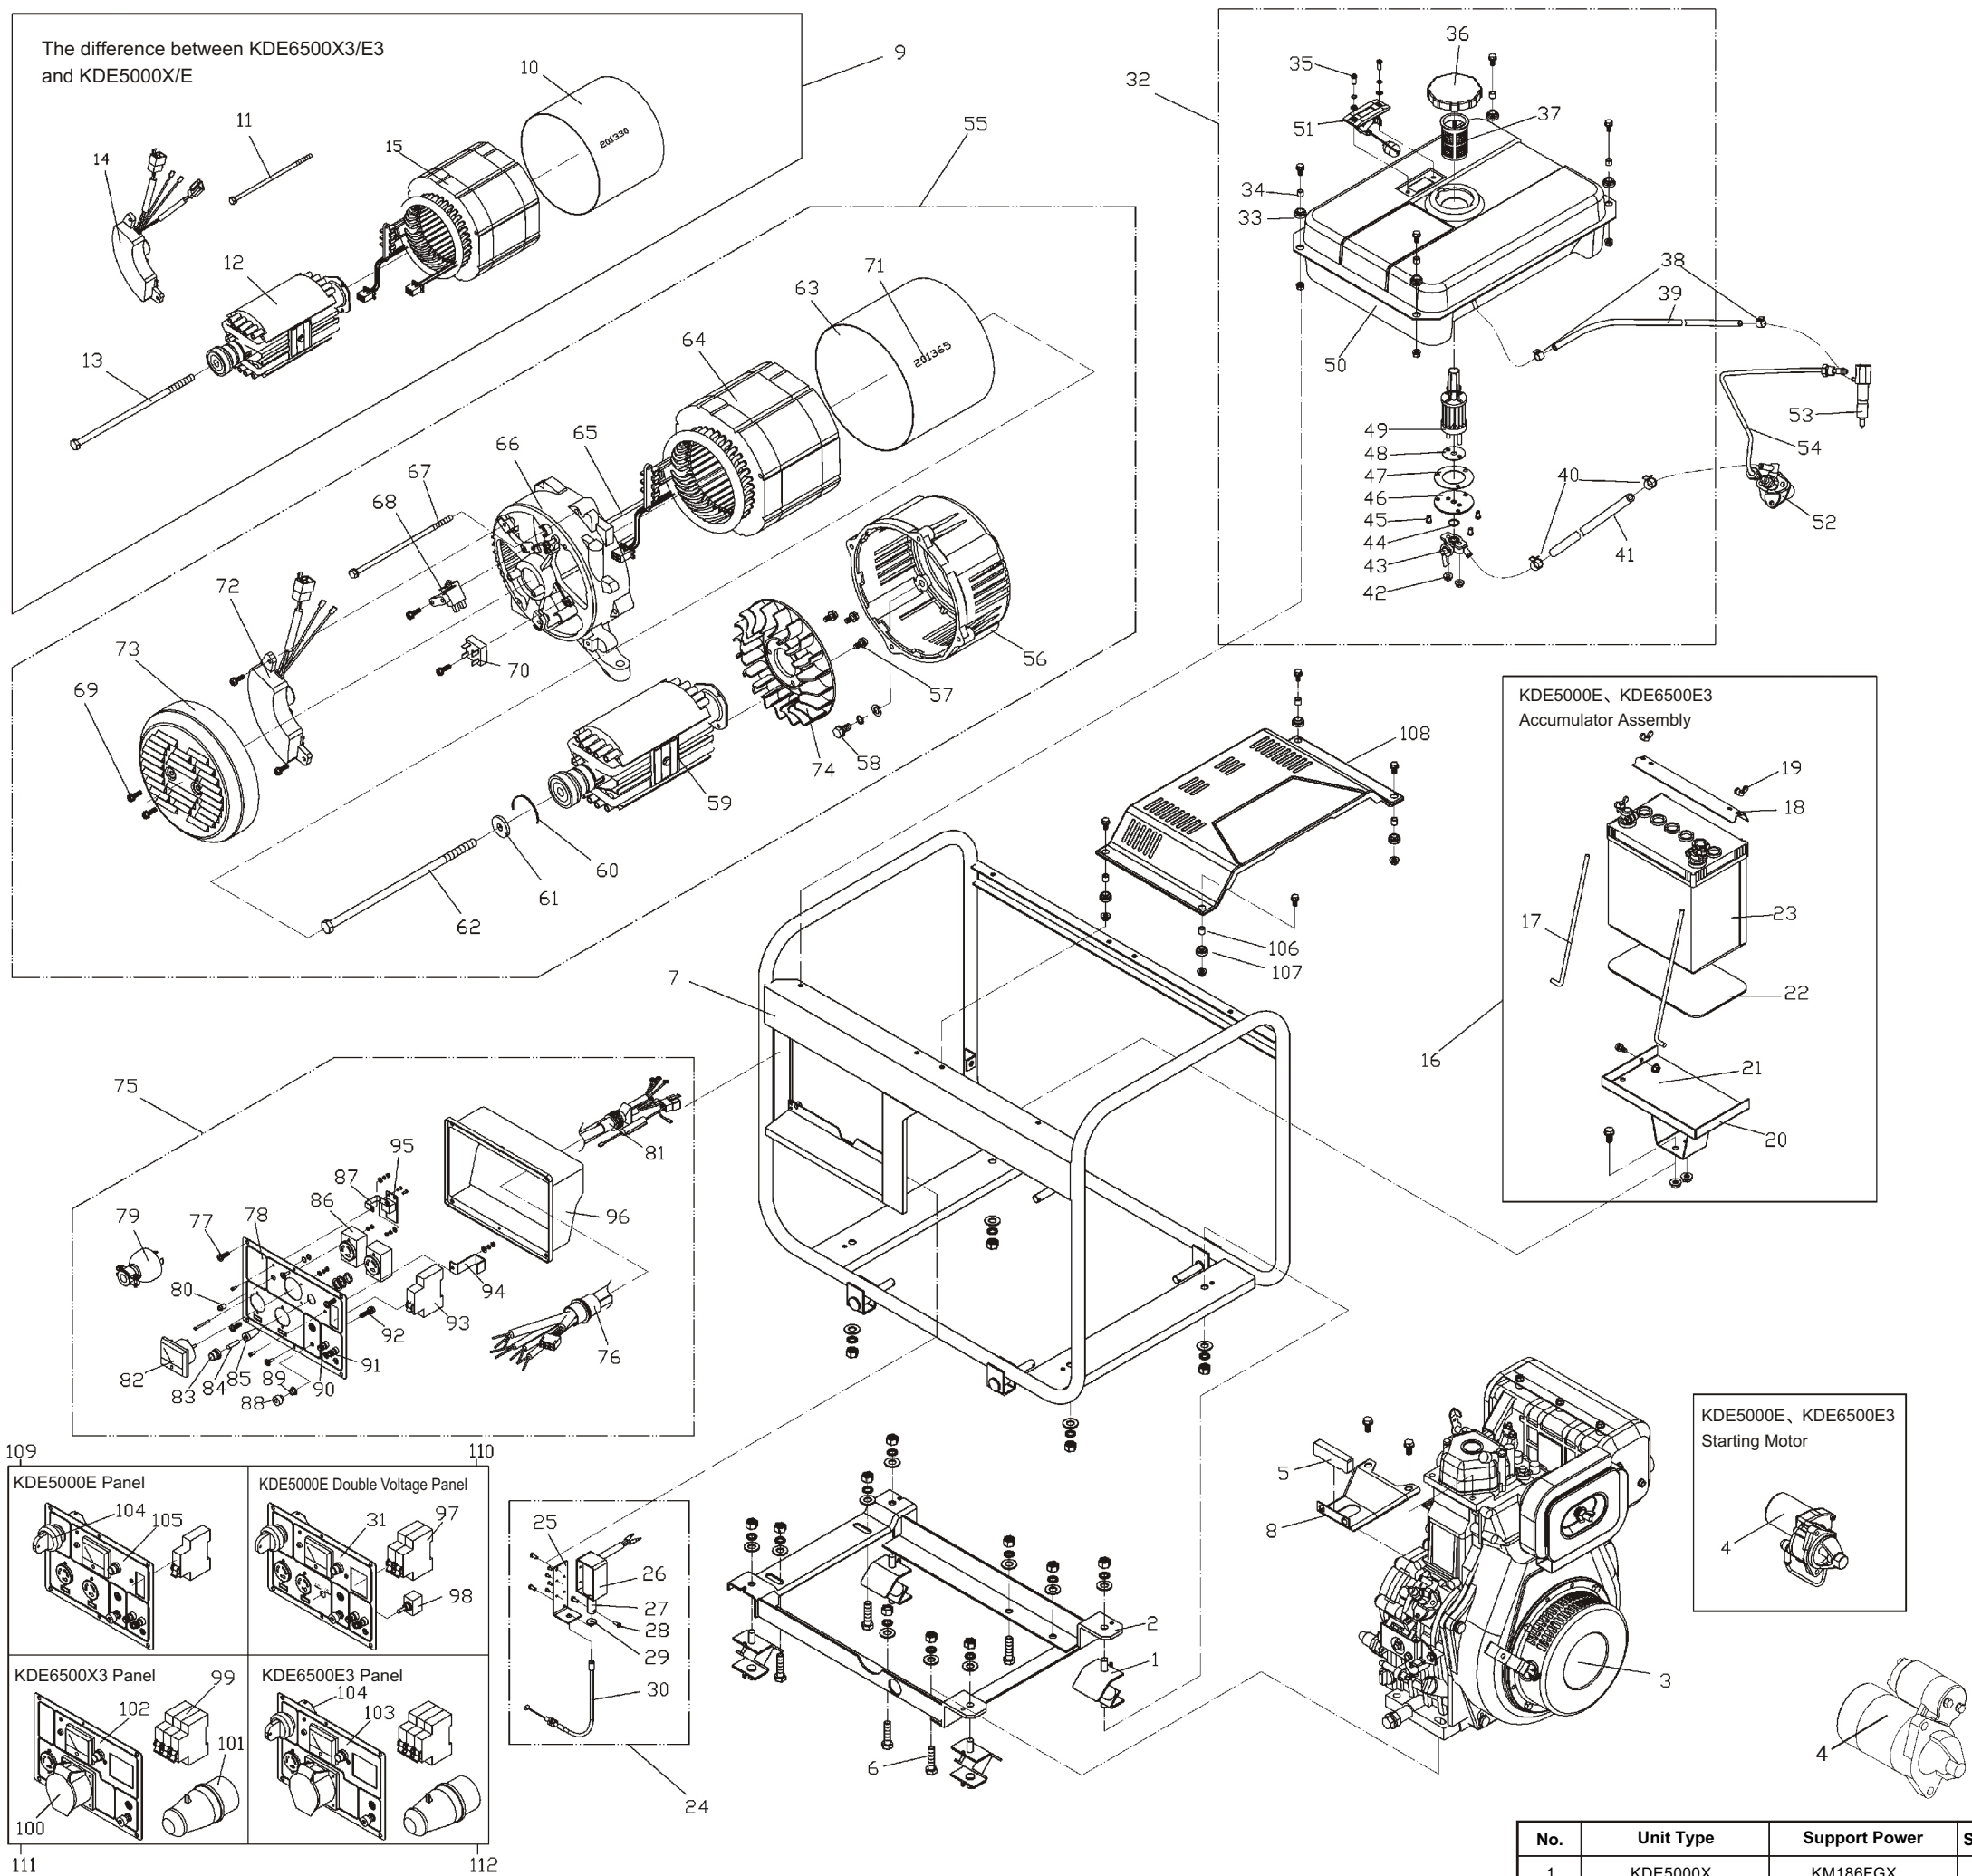

No.	Unit Type	Support Power	Support Motor
1	KDE5000X	KM186FGX	190
2	KDE5000E	KM186FGE	190
3	KDE6500X	KM186FAGE	204
4	KDE6500E	KM186FAGE	204
5	KDE6000X3	KM186FGX3	190
6	KDE6000E3	KM186FGE3	190
7	KDE6500X3	KM186FAGX3	204
8	KDE6500E3	KM186FAGE3	204

No.	Code.	Description	Qty.	No.	Code.	Description	Qty.	No.	Code.	Description	Qty.	No.	Code.	Description	Qty.
1	KDE5000X-10000	Cushion	4	29	KDE3500X-40006a	Electromagnet Washer	1	57	GB6563-86	Self-Tapping Locking Screw ST5	3	85	BLX	Fuse Plastics Bottom Case	1
2	KDE5000X-60000	Housing Base Weldment Assembly	1	30	KDE3500X-41000a	Flexible Shaft Unit	1	58	GB5781-86	Bolt M8X20	4	86	250V-26A	Single-phase Receptacle	2
3	KM186FG-00000	Air-cooled Diesel	1	31	KDE5000E-13100J	Instrument Panel	1	59	5KM.6741.01	Generator Rotator	1	87	KDE3500X-50003a	Setting Plate	1
4	KM186F-15100	Starting Motor	1	32	KDE5000X-30000	Fuel Tank Assembly	1	60	6204DV	Clip Ring	1	88	GB-806-88	Grounding Screw Cap	1
5	KDE5000X-00002	Assistant Support Frame Cushion	1	33	KDE5000X-30004	Cushion	4	61	8KM.2182.01	Pull-through Shaft Bolt Washer	1	89	GB6177-86	Nut M6	1
6	GB5783-86	Bolt M10X40	6	34	KDE5000X-30005	Sheath	4	62	8KM.2002.01	Pull-through Shaft Bolt M10X214	1	90	910A red	Anode Wiring Terminal Unit	1
7	KDE5000X-50000	Housing Weldment Assembly	1	35	GB/T819.1-2000	Screw M5X12	2	63	8KM.0132.01	Electical Mechinery Control Plate	1	91	910A Black	Cathode Wiring Terminal Unit	1
8	KDE5000X-00001	Engine Asistant Support Frame	1	36	KM168F-10002	Fuel Tank Cap Joint Assembly	1	64	5KM.6801.01	Electical Mechinery Stator	1	92	JB4110-85	Bolt M6x20	1
9	KTS-5	Three-phase Machine Assembly	1	37	KM168F-10003	Fuel Filler Screen	1	65	8KM.203.009	Bolt M5	2	93	GB10963/B20/1P	Air Switch	1
10	8KM.0132.01	Three-phase Machine Safeguard Plate	1	38	KM168F-10013	Fuel Return Pipe Clip	2	66	8KM.0342.01	Electical Mechinery Rare Cover	1	94	KDE3500X-50002a	Air Switch Setting Plate	1
11	GB818-85	Screw M6X26	4	39	KDE5000X-30002	Fuel Return Pipe	1	67	GB5787-86	Bolt M6X120	4	95	KDE3500X-50008a	Oil Pressure Protection Breadboard	1
12	5KM.6741.01	Three-phase Generator Rotator	1	40	KM168F-30011	Fuel Filler Pipe Clip	2	68	D104	Carbon Brush	1	96	KDE5000X-70002	Instrument Box Rare Cover	1
13	8KM.2004.01	Pull-through Shaft Bolt M10X224	1	41	KDE5000X-30001	Fuel Filler Pipe	1	69	GB6563-86	Self-tapping Locking Screw	2	97	DZ47-63 C20	Air Switch	1
14	5KM.5242.005	Three-phase Excitation AVR	1	42	GB6177-86	Nut M6	2	70	RBPC35-10	Gratz Rectifier	1	98	KN11-302	Knob Switch	1
15	5KM.6801.01	Three-phase Machine Stator	1	43	KM168F-10400	Fuel Tank Switch Assembly	1	71		Generator Serial Number	1	99	DZ47-63 C10	Air Switch	1
16	KDE5000E-80000	Accumulator Assembly	1	44	GB3452.1-92	O-Ring	1	72	AVR	Excitation AVR	1	100	16A-6h/220-415V	Three-phase Receptacle	1
17	KDE3500E-00003a	Screw Rod	2	45	GB/T819.1-2000	Screw	3	73	8KM.0131.01	Electical Mechinery Booting Air Cover	1	101	16A-6h/220-415V	Three-phase Pin	1
18	KDE3500E-00005a	Accumulator Pressure Plate	1	46	KDE5000X-31006	Seal Plate	1	74	8KM.4351.01	Electical Mechinery Fan	1	102	KDE6500X3-71000	Instrument Panel	1
19	GB62-88	Wing Nut M6	2	47	KDE5000X-31007	Seal Washer	1	75	KDE5000X-70000	Panel Assembly	1	103	KDE6500E3-71000	Instrument Panel	1
20	KDE5000E-81000	Accumulator Bracket Weldment Assembly	1	48	KM168F-10007	Seal Washer	1	76	KDE5000X-70003	Wiring Harness Setting Sheath	1	104	JK425	Starting key	1
21	GB6177-86	Nut M6	1	49	KM168F-10300	Element Assembly	1	77	GB818-85	Screw M6X16	4	105	KDE5000E-71000	Instrument Panel	1
22	KDE3500E-00002a	Accumulator Washer	1	50	KDE5000X-31000	Fuel Tank Weldment Assembly	1	78	KDE5000X-70001	Instrument Panel	1	106	KDE5000X-30005	Sheath	4
23	36AH	Accumulator 12V	1	51	KDE5000X-32000	Oil Mark Assembly	1	79	250V/26A	Single-phase Pin	1	107	KDE5000X-30004	Cushion	4
24	KDE3500X-40000a	Electromagnet Assembly	1	52	KM186F-12000	Fuel Pump	1	80	CLAD	Oil Pressure Alerting Lamp	1	108	KDE5000X-40000	Decorating board Assembly	1
25	KDE3500X-44000a	Electromagnet Setting Plate	1	53	KM186F-13000	Nozzle	1	81	KDE5000X-70009	Circuitry Setting Sheath	1	109	KDE5000E-70000	Panel Assembly	1
26	DCT-12-C	Electromagnet	1	54	KM186F-10500	High-Pressure Fuel Pipe	1	82	MV52.5000-300V	Voltmeter KD-45	1	110	KDE5000E-13000J	Panel Assembly	1
27	DCT-12-C	Iron-corn	1	55	KT-5	Single-phase Electrical Machinery Assembly	1	83	BLX	Fuse Box	1	111	KDE6500X3-70000	Panel Assembly	1
28	GB/T818-85	Screw M5X8	2	56	8KM.3041.01	Electical Mechinery Forepart Cover	1	84	Φ6 × 30	Fuse	1	112	KDE6500E3-70000	Panel Assembly	1

KIPOR POWER CO., LTD.

11/F Suntime International Mansion, 450 Fushan Road, Pudong, Shanghai, China
TEL: 86-21-58208881 FAX: 86-21-58208877